Start Here

Epson® Perfection® 4490 Photo

1 Unpack

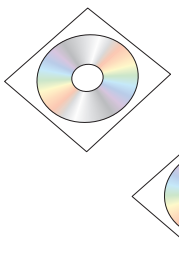

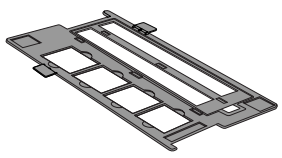

Film holders

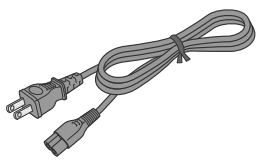

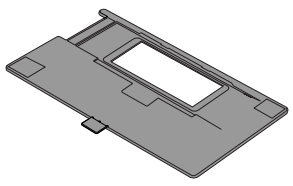

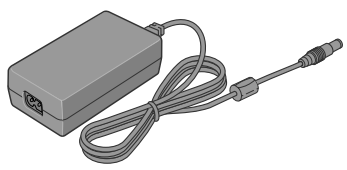

AC adapter and power cord

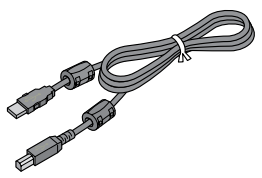

Note: Do not connect the USB cable yet.

2 Install software

1

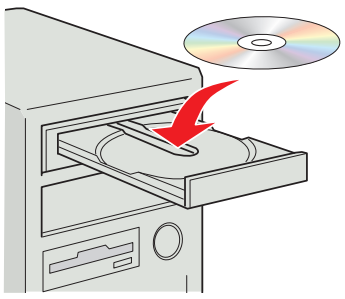

Insert the scanner software CD.

Windows®: The installer starts automatically.
Macintosh® OS X: Double-click the CD-ROM icon on the desktop.

2

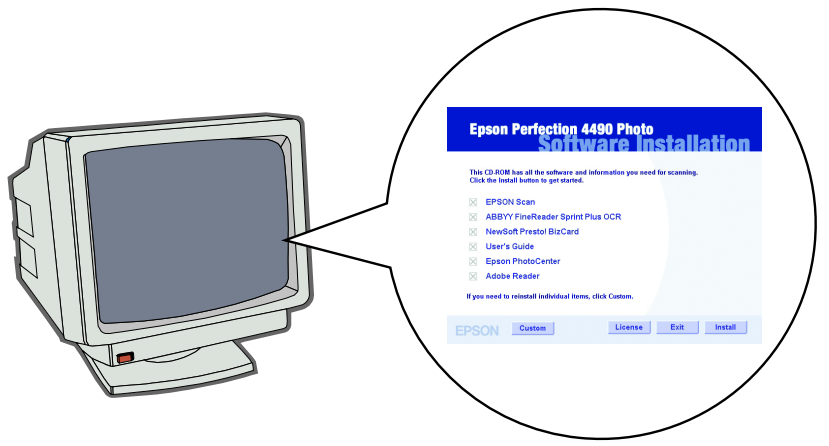

Click **Install** and follow the on-screen instructions. At the end, remove the CD.
Insert the Adobe® Photoshop® Elements CD and follow the on-screen instructions.

3 Unlock

1

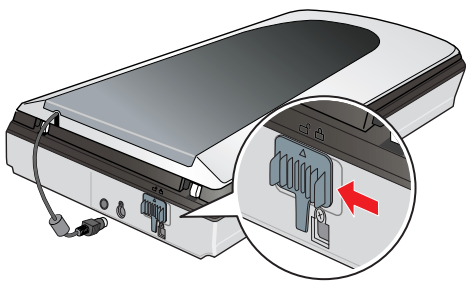

Unlock the scanner.

2

Unlock the transparency unit transportation lock.

Printed in XXXXXX XX.XX-XX XXX

410079900

4 Connect and turn on

1

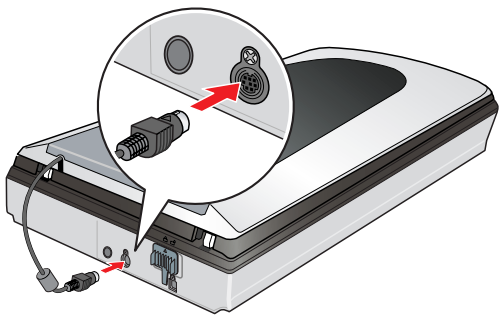

Connect the cover cable.

2

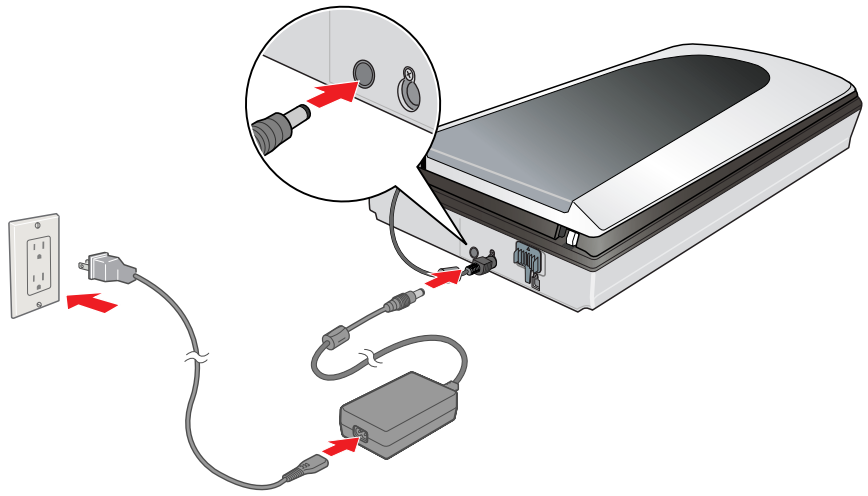

Connect the AC adapter and power cable.

3

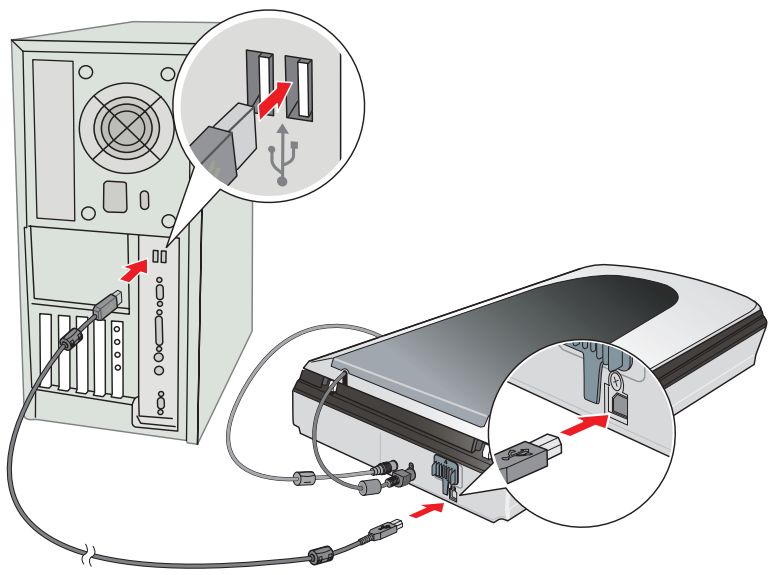

Connect the USB cable.

4

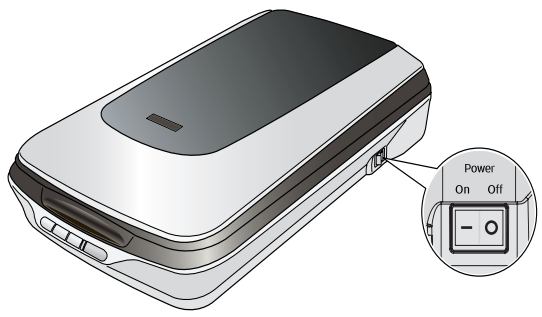

Turn on the scanner using the power switch.

Place a document or photo

1

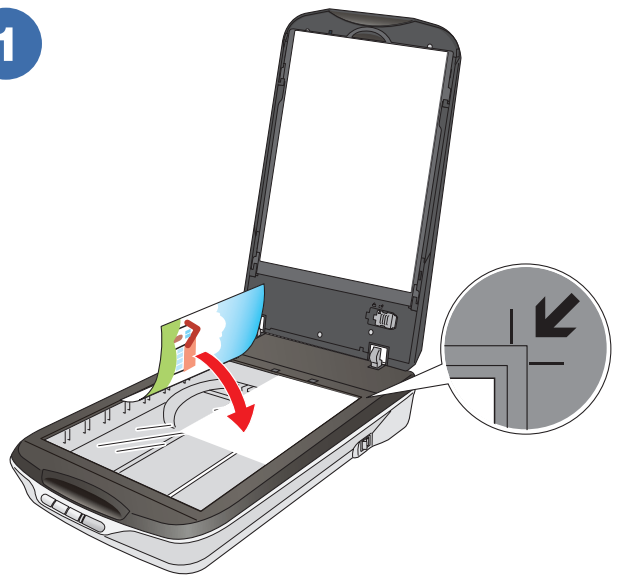

2

Place film or slides

Place film

1

2 **35 mm film**

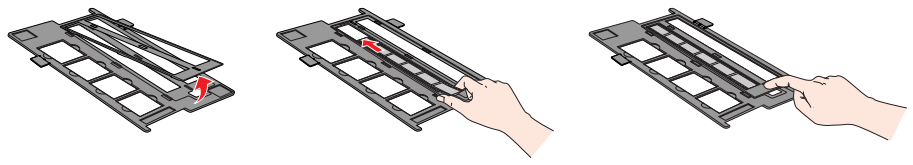

Medium format film

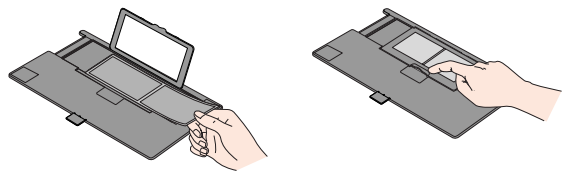

3 **35 mm film**

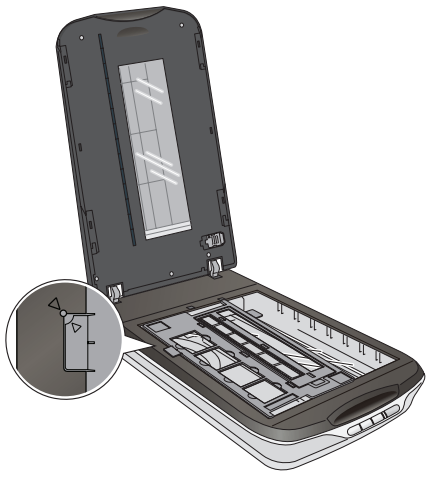

Medium format film

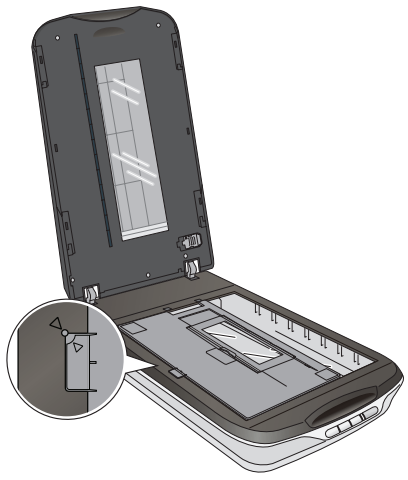

4

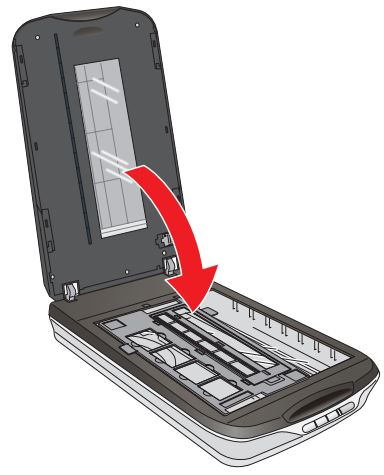

Place slides

1

2

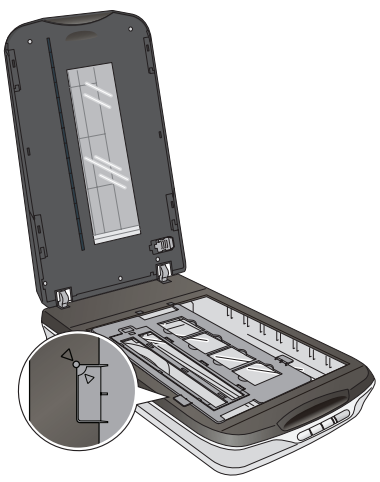

3

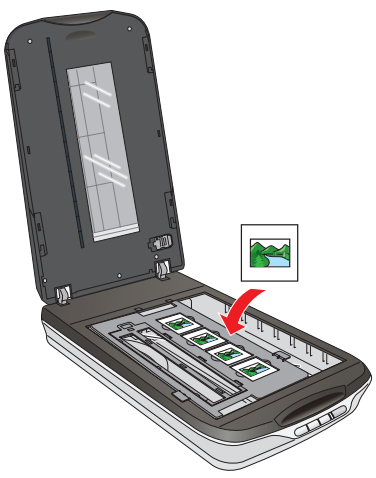

4

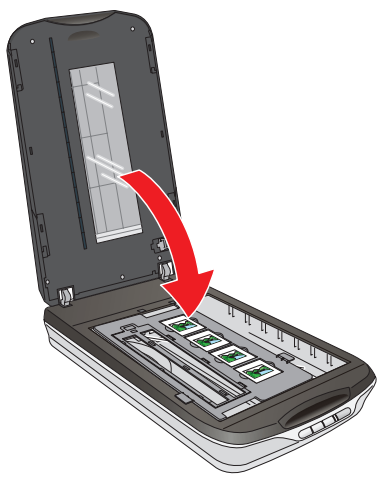

Scan

1

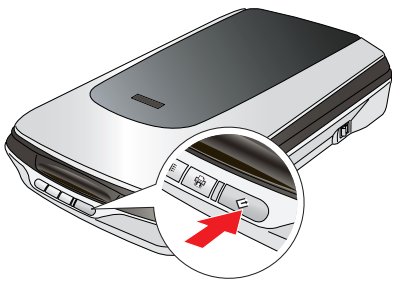

Press the ⬨ **Start** button.

2

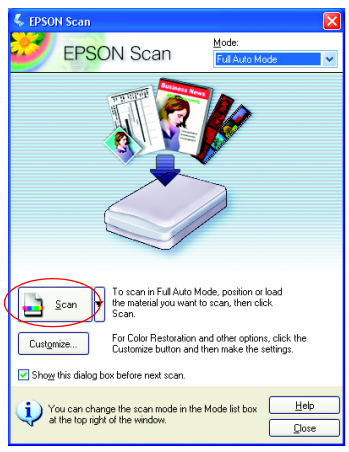
EPSON Scan
EPSON Scan
Mode:
Full Auto Mode
Scan
To scan in Full Auto Mode, position or load the material you want to scan, then click Scan.
Customize...
For Color Restoration and other options, click the Customize button and then make the settings.
Show this dialog box before next scan.
You can change the scan mode in the Mode list box at the top right of the window.
Help
Close

Click **Scan**.

3

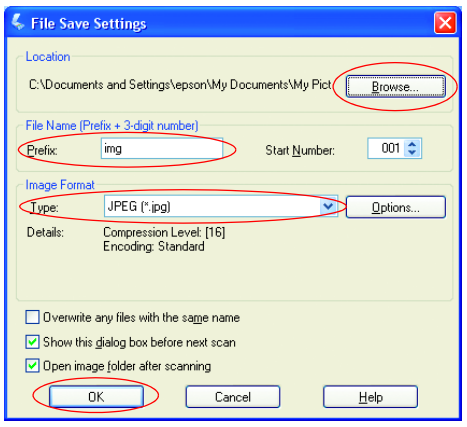

Select your file settings.

4

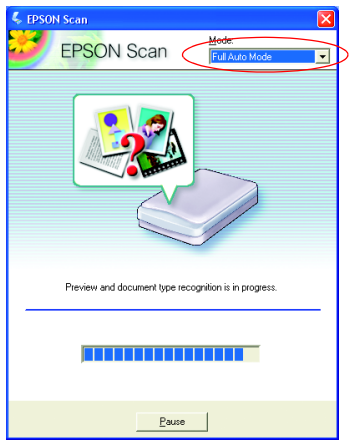

EPSON Scan scans in Full Auto Mode. Wait for your scan to finish or click **Pause** to change the scanning mode.

Do more

Restore color

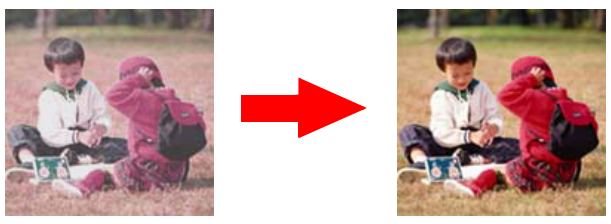

1

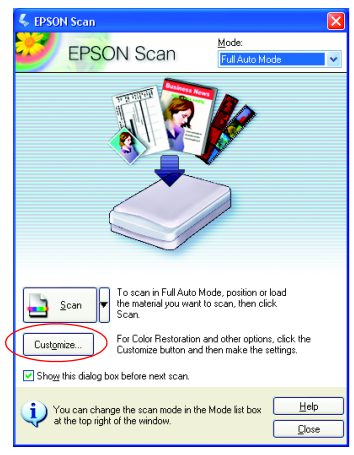
EPSON Scan
EPSON Scan
Mode:
Full Auto Mode
Scan
To scan in Full Auto Mode, position or load the material you want to scan, then click Scan.
Customize...
For Color Restoration and other options, click the Customize button and then make the settings.
Show this dialog box before next scan.
You can change the scan mode in the Mode list box at the top right of the window.
Help
Close

2

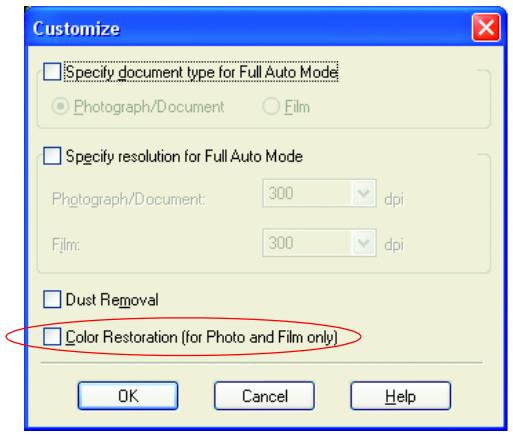

Remove dust or scratch marks using Digital ICE™ or Digital ICE Lite™

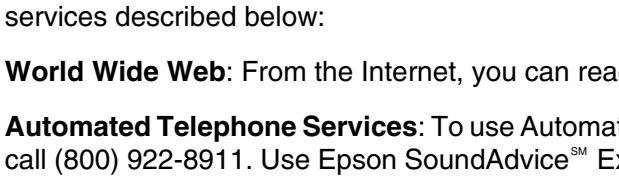

Note: Digital ICE is for color film/slides scanned in Home or Professional Mode. View the on-screen *User's Guide* for instructions.

Help

User's Guide

Double-click the **PERF4490P User's Guide** icon on your desktop.

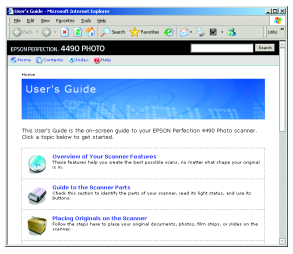

Scanner software help

Click the **Help** or **?** button on your scanner software screen.

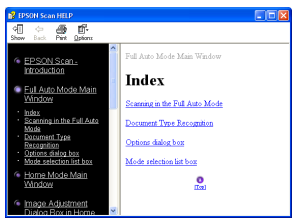

Epson Technical Support

Epson provides technical assistance 24 hours a day through the electronic support services and automated telephone services described below:

World Wide Web: From the Internet, you can reach Epson Support at http://support.epson.com.

Automated Telephone Services: To use Automated Telephone Services, you must have a touch tone telephone and call (800) 922-8911. Use Epson SoundAdvice℠ Express Code 70650 to quickly select your scanner in SoundAdvice.

To Speak to a Customer Service Representative: Dial (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 am to 6 pm, Pacific Time, Monday to Friday. Toll or long distance charges may apply.

Software Technical Support

Adobe Photoshop Elements: Windows (206) 675-6358, Macintosh (206) 675-6258, www.adobe.com/support

Presto! BizCard®: (510) 445-8616, Fax (510) 445-8601, www.newsoftinc.com, contactus@newsoftinc.com

ABBYY® FineReader® Sprint Plus: (510) 226-6719, Fax (510) 226-6069, www.abbyyusa.com, support@abbyyusa.com

Epson is a registered trademark of Seiko Epson Corporation. Perfection is a registered trademark and SoundAdvice is a service mark of Epson America, Inc.
General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.
© 2005 Epson America, Inc. 4/05 CPD-19823